


Assembly Instructions Breeze Stool

ASSEMBLY NOTES:

Assemble on a solid surface.

Align all 4 legs to the base - **longer width of the base to the FRONT** of the stool. Push the seat down firmly onto the base.

You may need to use a rubber mallet. Tap the SEAT with the mallet, to push the leg of the seat firmly into the base section.

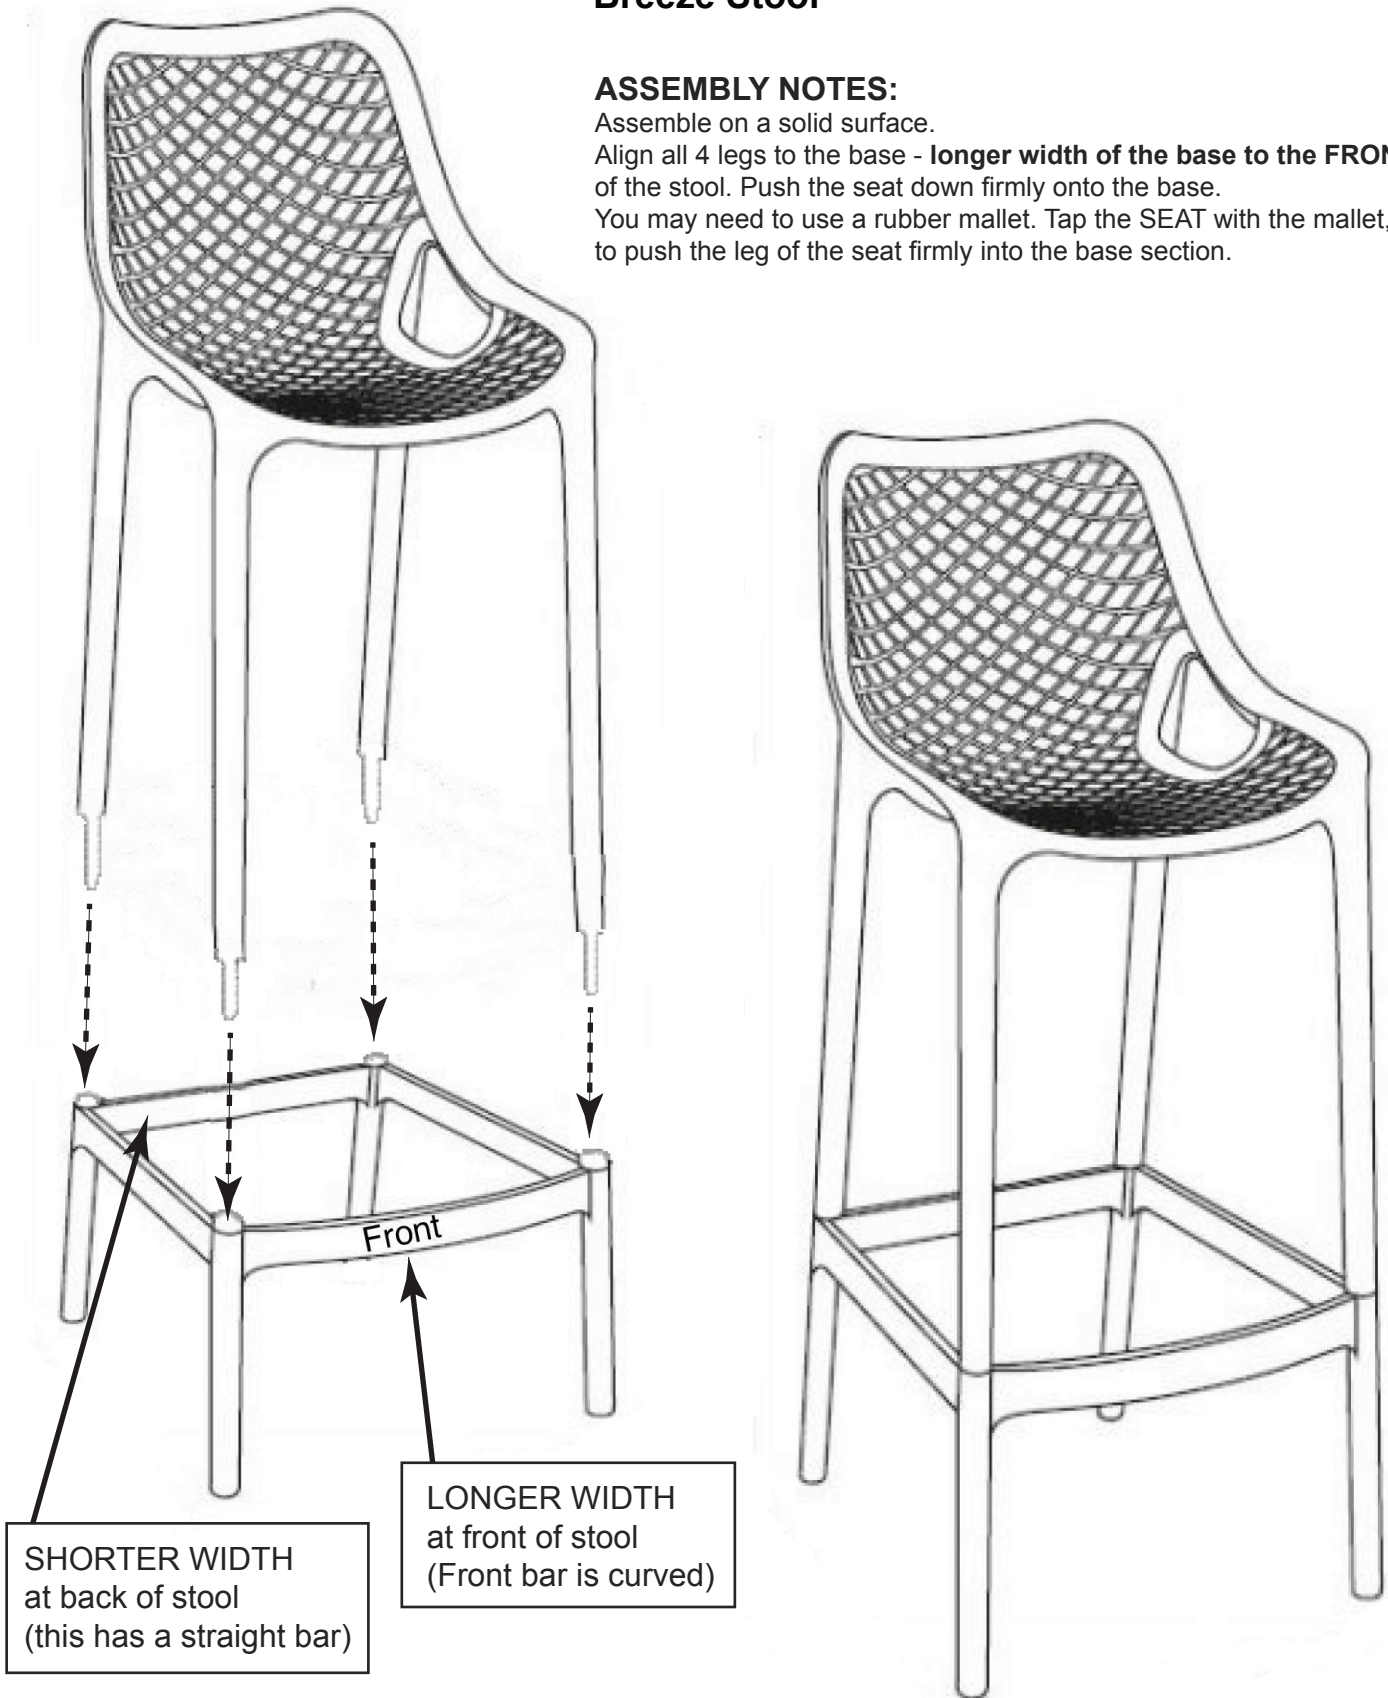

PLEASE NOTE: These stools are designed for permanent assembly and cannot be taken apart after assembly. We've tried to make this stool as easy to assemble as possible. In the unlikely event you have problems putting it together or missing pieces, please contact us.

Thank you for your purchase.

To learn more about our products please visit www.chairforce.com.au and www.chairforce.co.nz

AU: Call: 08 9436 8570 Email: customer@brayco.com.au

NZ: Call: 09 271 5000 Email: sales@chairforce.co.nz



Please recycle
these instructions