

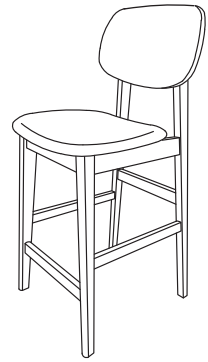
JONASBS

Never use power tools unless instructed. 

You will need a rubber mallet and a crosshead screw driver 

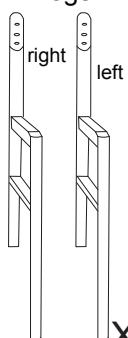






Lucio











Assembly Instructions Jonas Stool



Before assembly please check you have all parts listed below.
Please assemble on a clean and flat surface, such as carpet or cardboard to prevent scratches (do not assemble on your floor). PLEASE NOTE: We've tried to make this stool as easy to assemble as possible. In the unlikely event you have problems putting it together or missing pieces, please contact us. Details below.

PARTS LIST

| | | |
|---|--|---|
| A legs  right left X 2 | B backrest  X 1 | C seat  X 1 |
| | D front seat support  X 1 | E back seat support  X 1 |
| | F front footrest  X 1 | G back rail  X 1 |

| | | | |
|--|--|--|--|
| 1 JCBC SCREW M6 X 50MM (RB)  X 6 | 2 JCBC SCREW M6 X 40MM (RB)  X 2 | 3 JCBC SCREW M6 X 30MM (RB)  X 2 | |
| 4 SPRING WASHER 5/16" (RB)  X 10 | 5 FLAT WASHER 6 x 12 (RB)  X 6 | 6 SCREW PIN  X 4 | 7 PH M5 X 32MM (BLK)  X 8 |
| 8 WOOD DOWEL M10 X 30MM  X 10 | 9 ALLEN KEY M4 (BALL SHAPE)  X 1 | 10 WOOD BUTTON  X 4 | |

STEP 1

You will need:
part no. A legs x 2
part no. D front seat support
part no. E back seat support
part no. 8 dowel X 10

STEP 2

Securely push D, E, F, G onto the leg (B). Add the other leg (B) and push securely together.

STEP 3

Secure seat supports D + E
You will need:
part no. 1 screw X 4
part no. 4 spring washer X 4
part no. 6 screw pin X 4

STEP 4

Screw seat to frame.
You will need:
part no. C seat X 1
part no. 1 screw X 2
part no. 4 spring washer X 2
part no. 5 flat washer X 2

STEP 5

Screw backrest to frame.
You will need:
part no. B chair back x 1
part no. 2 screw X 2
part no. 3 screw X 2
part no. 4 spring washer X 4
part no. 5 flat washer X 4
part no. 10 button X 4

STEP 6

Secure rails to frame through the holes in the underneath of F & G and through the side holes in seat frame.
You will need:
part no. 7 screw X 8



Please recycle these instructions

Exclusively distributed in AU and NZ by Chairforce.
Thank you for your purchase.
To learn more about our products please visit chairforce.com.au or chairforce.co.nz
AU: Call: 08 9436 8570
Email: customercare@brayco.com.au

NZ: Call: 09 271 5000
Email: sales@chairforce.co.nz